

ML4062-SLB V1

Technical Reference

QSFP-DD Electrical Passive Loopback Module



Table of Contents

1	<i>Overview</i>	3
1.1	ML4062-SLB QSFP-DD800 Thermal Load Key Features	3
1.2	LED Indicator	3
1.3	Recommended Operating Conditions	4
2	<i>Functional Description</i>	4
2.1	Management Data Interface – I2C	4
2.2	I2C Signals, Addressing and Frame Structure	4
2.2.1	I2C Frame	4
2.2.2	Management Interface Timing Parameters	5
2.2.3	Memory Specifications	6
2.3	Low Speed Electrical Hardware Pins	6
2.3.1	Modsell	6
2.3.2	ResetL	6
2.3.3	InitMode	6
2.3.4	ModPrsL	7
2.3.5	IntL	7
2.4	QSFP-DD Memory Map	8
2.5	ML4062 Specific Functions	9
2.5.1	Temperature Monitor	9
2.5.2	Voltage Sense	10
2.5.3	Thermal Loads Mode Select	10
2.5.4	Status and control registers	12
2.5.5	Insertion Counter	12
2.5.6	Cut-Off Temperature	12
2.5.7	Alarm and warning thresholds	13
3	<i>QSFP-DD Pin Allocation</i>	14

1 Overview

QSFP-DD Passive Loopback Module, ML4062-SLB, is used for testing QSFP-DD transceiver ports under board level tests. By substituting a full-featured QSFP-DD transceiver with the ML4062, its electrical loopback provides a cost effective low loss method for QSFP-DD port testing.

The **ML4062-SLB** is packaged in a standard MSA housing compatible with all QSFP-DD ports. Transmit data from the host is electrically routed, (internal to the loopback module), to the receive data outputs and back to the host. It provides an economical way to exercise QSFP-DD ports during R&D validation, production testing, and field testing.

The **ML4062-SLB** provides 7 power classes using a customer supplied +3.3 V voltage supply.

1.1 ML4062-SLB QSFP-DD Thermal Load | Key Features

- Supports 8x50G electrical interface
- QSFP-DD MSA Form Factor
- Microcontroller can be programmed to maintain user specified PD or constant temperature
- Built with advanced PCB material
- 4 Thermistors on PCBA
- 4 independent power heaters, with 0.1 W resolution, up to 14 W
- Temperature Monitor and alarms warning
- Superior SI performance
- MSA Compatible Configuration and EEPROM
- Loops back TX to RX on all 8 ports
- I2C Interface
- Programmable MSA memory pages
- I2C control from edge connectors and from rear pin header
- 2 status LED Indicator
- Insertions counter
- Hot Pluggable module
- Cut-off temperature preventing module overheating
- Custom memory maps
- Confirm CDAUI-8 compliance for 56G PAM-4

1.2 LED Indicator

Green (Solid) – Signifies that the module is operating in high power mode.

Red (Solid) – Signifies the module is operating in low power mode.

1.3 Recommended Operating Conditions

Parameter	Symbol	Notes/Conditions	Min	Typ	Max	Units
Operating Temperature	TA		0		85	°C
Supply Voltage	VCC	Main Supply Voltage	3.00	3.3	3.5	V
Input/Output Load Resistance	RL	AC-Coupled, Differential	90	100	110	Ω
Power Class		Programmable to Emulate all power classes	0		14	W
Bit Rate		28G NRZ 56G PAM4			56.25	Gbps

2 Functional Description

2.1 Management Data Interface – I2C

The **ML4062-SLB** supports the I2C interface. This QSFP-DD datasheet is based on the QSFP-DD specification Rev2.0.

2.2 I2C Signals, Addressing and Frame Structure

2.2.1 I2C Frame

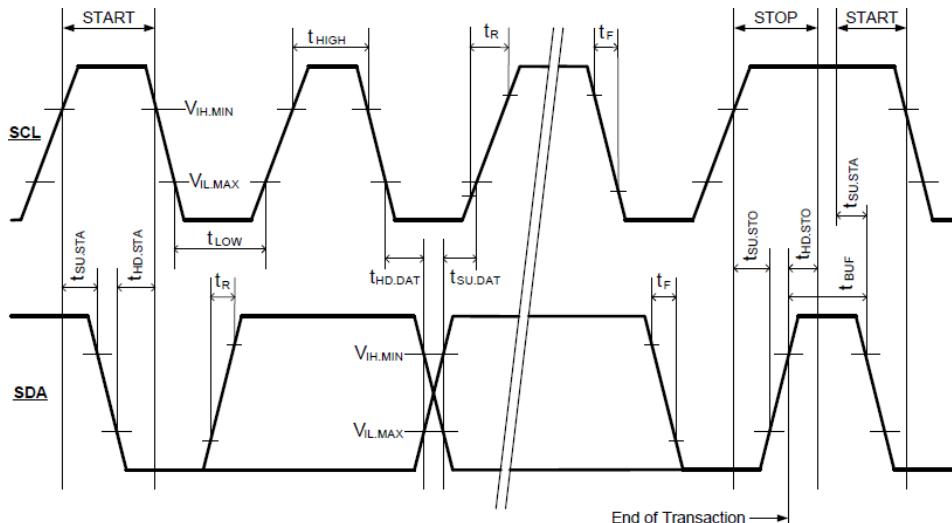


Figure 1: QSFP-DD Timing Diagram

The 2-wire serial interface address of the QSFP-DD module is 1010000X (A0h). In order to allow access to multiple QSFP-DD modules on the same 2-wire serial bus, the QSFP-DD includes a module select pad, ModSell. This input (which is pulled high, deselected in the module) must be held low by the host to select the module of interest and allow communication over the 2-wire serial interface. The module must not respond to or accept 2-wire serial bus instructions unless it is selected.

Before initiating a 2-wire serial bus communication, the host shall provide setup time on the ModSell line of all modules on the 2-wire bus. The host shall not change the ModSell line of any module until the 2-wire serial bus communication is complete and the hold time requirement is satisfied.

2.2.2 Management Interface Timing Parameters

The timing parameters for the 2-Wire interface to the QSFP-DD module are shown in the table below:

Parameter	Symbol	Min	Typ	Max	Unit
Clock Frequency	f_{SCL}	0		400	kHz
Clock Pulse Width Low	t_{LOW}	1.3			ns
Clock Pulse Width High	t_{HIGH}	0.6			ns
Time bus free before new transmission can start	t_{BUF}	20			us
START Hold Time	$t_{HD,STA}$	0.6			ns
START Set-up Time	$t_{SU,STA}$	0.6			ns
Data In Hold Time	$t_{HD,DAT}$	0			ns
Data in Set-up Time	$t_{SU,DAT}$	0.1			ns
Input Rise Time (400 kHz)	$t_{R,400}$				
Input Fall Time (400 kHz)	$t_{F,400}$				
STOP Set-up Time	$t_{SU,STO}$	0.6			ns
ModSell Setup Time	$t_{SU,ModSell}$	2			ms
ModSell Hold Time	$T_{HD,ModSell}$	2			ms
Aborted sequence – bus release	Deselect_Abort	2			ms

2.2.3 Memory Specifications

QSFP-DD memory transaction timings are given in the above table.

Parameter	Symbol	Min	Max	Unit
Serial Interface Clock Holdoff “Clock Stretching”	T_clock_hold		500	us
Complete Single or Sequential Write	tWR	5	40	ms
Endurance (Write Cycles)		50K		cycles

2.3 Low Speed Electrical Hardware Pins

In addition to the 2-wire serial interface the module has the following low speed pins for control and status:

- Modsell
- ResetL
- LPMode
- IntL
- ModPrsL

2.3.1 Modsell

The ModSell is an input signal that must be pulled to Vcc in the QSFP-DD module. When held low by the host, the module responds to 2-wire serial communication commands. The ModSell allows the use of multiple QSFP-DD modules on a single 2-wire interface bus. When ModSell is “High”, the module shall not respond to or acknowledge any 2-wire interface communication from the host.

2.3.2 ResetL

The ResetL signal shall be pulled to Vcc in the module. A low level on the ResetL signal for longer than the minimum pulse length (t_{Reset_init}) initiates a complete module reset, returning all user module settings to their default state.

2.3.3 InitMode

InitMode is an input signal. The InitMode signal must be pulled up to Vcc in the QSFP-DD module. The InitMode signal allows the host to define whether the QSFP-DD module will initialize under host software control (InitMode asserted High) or module hardware control (InitMode deasserted Low). Under host software control, the module shall remain in Low Power Mode until software enables the transition to High Power Mode. Under hardware control (InitMode de-

asserted Low), the module may immediately transition to High Power Mode after the management interface is initialized.

2.3.4 ModPrsL

ModPrsL must be pulled up to Vcc Host on the host board and grounded in the module. The ModPrsL is asserted “Low” when the module is inserted and deasserted “High” when the module is physically absent from the host connector.

2.3.5 IntL

IntL is an output signal. The IntL signal is an open collector output and must be pulled to Vcc Host on the host board. When the IntL signal is asserted Low it indicates a change in module state, a possible module operational fault or a status critical to the host system. The host identifies the source of the interrupt using the 2-wire serial interface. The IntL signal is deasserted “High” after all set interrupt flags are read.

2.4 QSFP-DD Memory Map


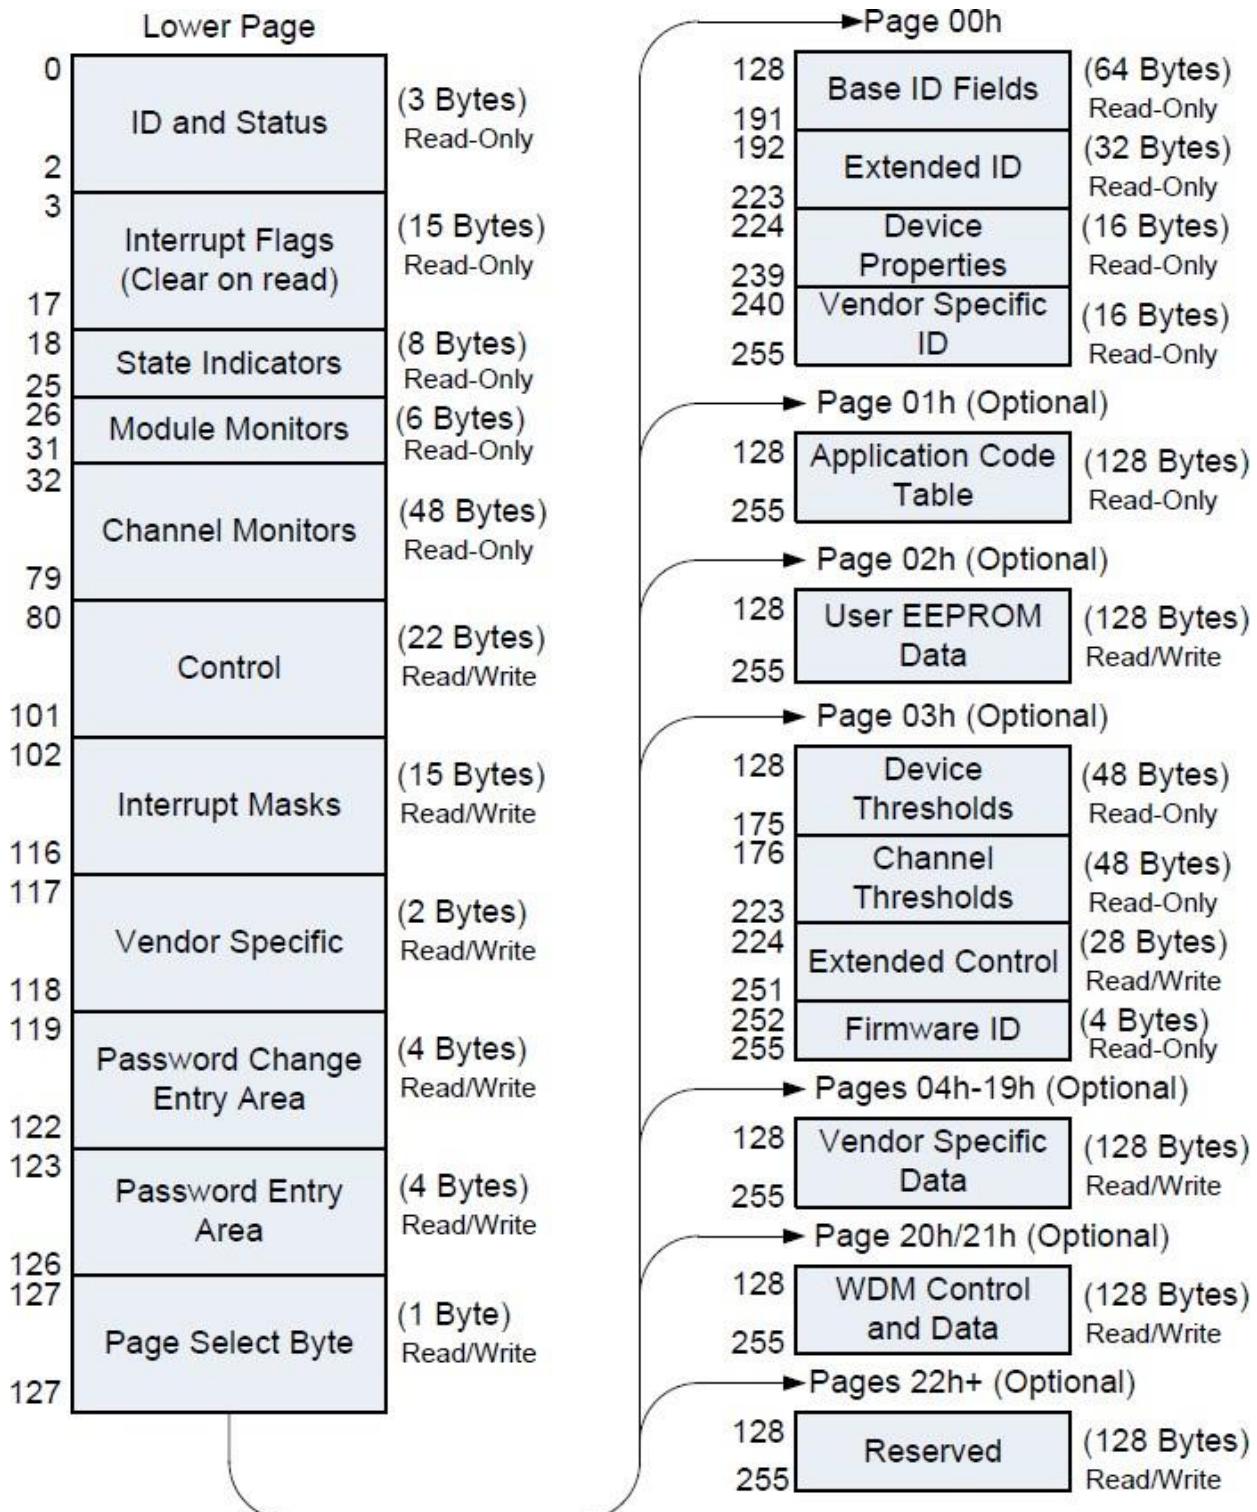


Figure 2: QSFP-DD Memory Map

2.5 ML4062 Specific Functions

2.5.1 Temperature Monitor

The **ML4062-SLB** has 4 internal temperature sensors in order to continuously monitor the module's temperature. The temperature sensor readings are present in low-memory registers. Internally measured Module temperature are represented as a 16-bit signed two's complement value in increments of 1/256 degrees Celsius, yielding a total range of -128 to $+128$ °C that is considered valid between -40 and $+125$ °C. Temperature accuracy is less than 1 degree Celsius over specified operating temperature and voltage. Please check below for details on the location of temperature sensors.

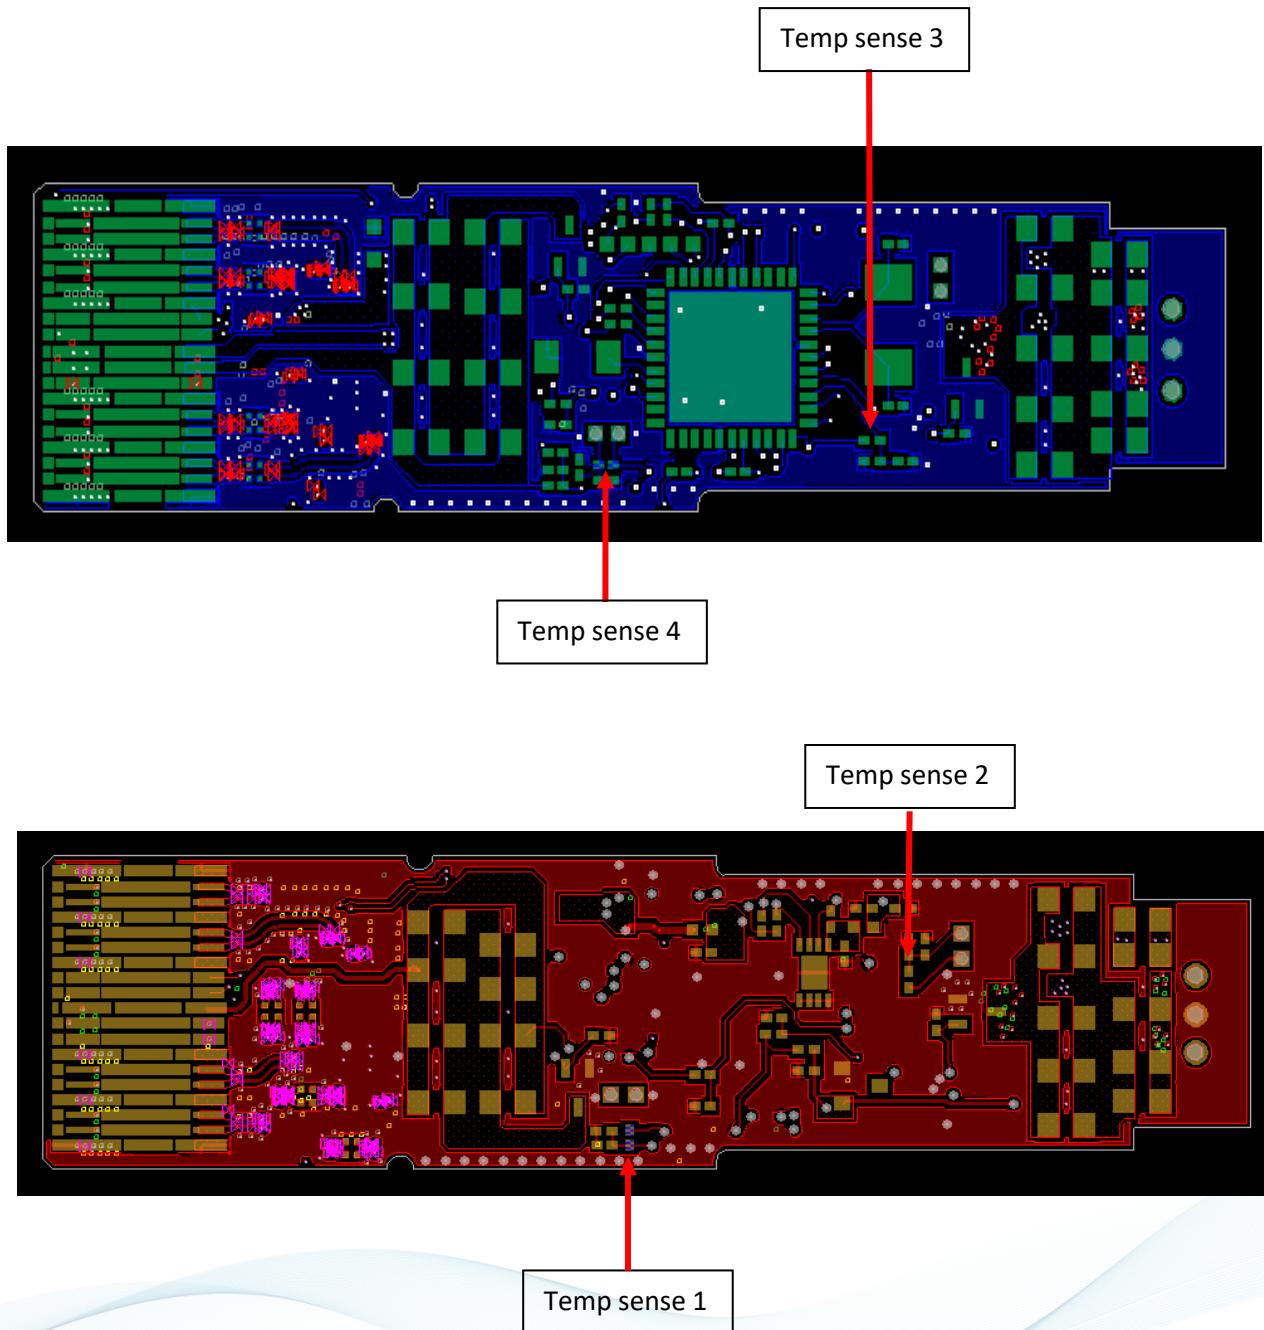

Address	Bit	Name	Description
26	ALL	Temperature MSB	Internally measured module temperature 1
27	ALL	Temperature LSB	Internally measured module temperature 1
150 Page 2	ALL	Temperature MSB	Internally measured module temperature 2
151 Page 2	ALL	Temperature LSB	Internally measured module temperature 2
152 Page 2	ALL	Temperature MSB	Internally measured module temperature 3
153 Page 2	ALL	Temperature LSB	Internally measured module temperature 3
154 page 2	ALL	Temperature MSB	Internally measured module temperature 4
155 page 2	ALL	Temperature LSB	Internally measured module temperature 4

2.5.2 Voltage Sense

A voltage sense circuit is available in the **ML4062-SLB** that allows to measure the internal module supplied voltage Vcc. Supply voltage is represented as a 16-bit unsigned integer with the voltage defined as the full 16-bit value (0 – 65535) with LSB equal to 100 uVolt, yielding a total measurement range of 0 to +6.55 Volts.

Address	Bit	Name	Description
30	ALL	Supply Voltage MSB	Internally measured module Supply Voltage
31	ALL	Supply Voltage LSB	Internally measured module Supply Voltage
156	ALL	VCC1 sens MSB	Internally measured module Supply Voltage
157	ALL	VCC1 sens LSB	Internally measured module Supply Voltage
158	ALL	VCCTX sens MSB	Internally measured module Supply Voltage
159	ALL	VCCTX sens LSB	Internally measured module Supply Voltage
160	ALL	VCCRX sens MSB	Internally measured module Supply Voltage
161	ALL	VCCRX sens LSB	Internally measured module Supply Voltage

2.5.3 Thermal Loads Mode Select

The thermal loads can be programmed in two modes:

1. To maintain user specified power dissipation (bit 0 = 0)
2. To maintain a constant temperature (bit 0 = 1)

Register 129 of memory page 2 allows to switch between the two modes.


2.5.3.1 Constant Power

Registers 135 to 138 of page 2 are used for PWM control over I2C. These are 8 bit data wide register. The consumed power changes accordingly when the value in this register is changed (only when in high power mode). The values written in this register are permanently stored. The PWM can also be used for module thermal emulation.

The module contains 4 thermal spots positioned where the optical transceivers usually are in an optical module that is heated relative to the related PWM register. One spot is 4.84 W and three are 3.2 W. The power can be configured with a 0.1 W resolution.

Address	Bit	Name	Description
135	7:0	4.84 W power controller 1	4.48 W top power spot control register, powered by P3V3 net
136	7:0	3.2 W power controller 2	3.2 W top power spot control register, powered by P3V3_Vcc1 net
137	7:0	3.2 W PWM controller 3	3.2 W bottom power spot PWM control register, powered by P3V3_VccTx net
138	7:0	3.2 W PWM controller 4	3.2 W bottom power spot PWM control register, powered by P3V3_VccRx net

In the figure below, the red spots represents the 4 thermal spots on the module.

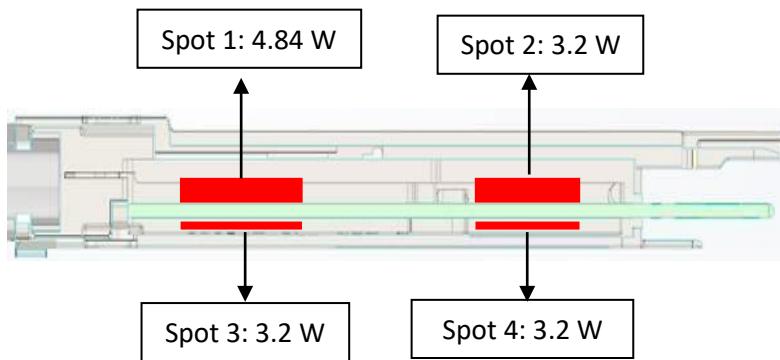

2.5.3.2 Constant Temperature

The module can be programmed to maintain a constant temperature. Register 130 of memory page 2 is used to set the desired temperature.

Two modes are available, Average module temperature to be maintained, or maintain temperature for a defined temp sense spot

Address	Bit	Name	Description
130	7:0	Target temperature	Target Temperature to be maintained by the module, LSB = 1 degC
131	0	Mode Select	0 = Average Temp ; 1 = Selected Spot Temp
131	7:4	Spot Select	Number of temp sense spot

2.5.4 Status and control registers

Register 139 reports the digital state of the QSFP-DD low speed signals and controls IntL pin.

Address	Bit	Name	Description
139	0	ModSel	Digital state of ModSel pin
139	1	InitMode	Digital state of InitMode
139	4	IntL	Assert/Deassert IntL pin
92	0	DataPathPwrUp	Enable Tx and Rx data path

2.5.5 Insertion Counter

The Insertion counter contains the number of times the module was plugged in a host. The insertion counter is incremented every time the module goes in initializing sequence, as it is nonvolatile it is always saved, and can be read anytime from registers 132 and 133 of memory page 2.

Address	Bit	Name	Description
132	ALL	Insertion Counter MSB	LSB unit = 1 insertion
133	ALL	Insertion Counter LSB	

2.5.6 Cut-Off Temperature

To avoid overheating the module, a Cut-Off Temperature is pre-defined.

The module is continuously monitoring the temperature and checking its value against the Cut-Off temperature. Once the module temperature reaches the cut-off temperature, the PWM will automatically turn off in order to prevent overheating. Once the temperature is 5 degrees below cut-off value, the PWM goes back to its previous value.

The Cut-Off temperature for the **ML4062-SLB** is 85 °C and it can be programmed to any value from register 134 of memory page 2.

Address	Bit	Name	Description
134	7:0	Cut-Off Temperature	Module Cut-Off Temperature, LSB = 1 degC

2.5.7 Alarm and warning thresholds

Each A/D quantity has a corresponding high alarm, low alarm, high warning and low warning threshold. These factory preset values allow the user to determine when a particular value is outside of “normal” limits. While Voltage LSB unit is 100 µV and Temperature LSB unit is 1/256 °C. Note that these addresses are of memory Page 03.

Address	Bit	Name	Default Value
128	ALL	high temp alarm threshold (MSB)	80 °C
129	ALL	high temp alarm threshold (LSB)	
130	ALL	low temp alarm threshold (MSB)	0 °C
131	ALL	low temp alarm threshold (LSB)	
132	ALL	high temp warning threshold (MSB)	75 °C
133	ALL	high temp warning threshold (LSB)	
134	ALL	low temp warning threshold (MSB)	5 °C
135	ALL	low temp warning threshold (LSB)	
144	ALL	high volt alarm threshold (MSB)	3.6 V
145	ALL	high volt alarm threshold (LSB)	
146	ALL	low volt alarm threshold (MSB)	3.0 V
147	ALL	low volt alarm threshold (LSB)	

3 QSFP-DD Pin Allocation

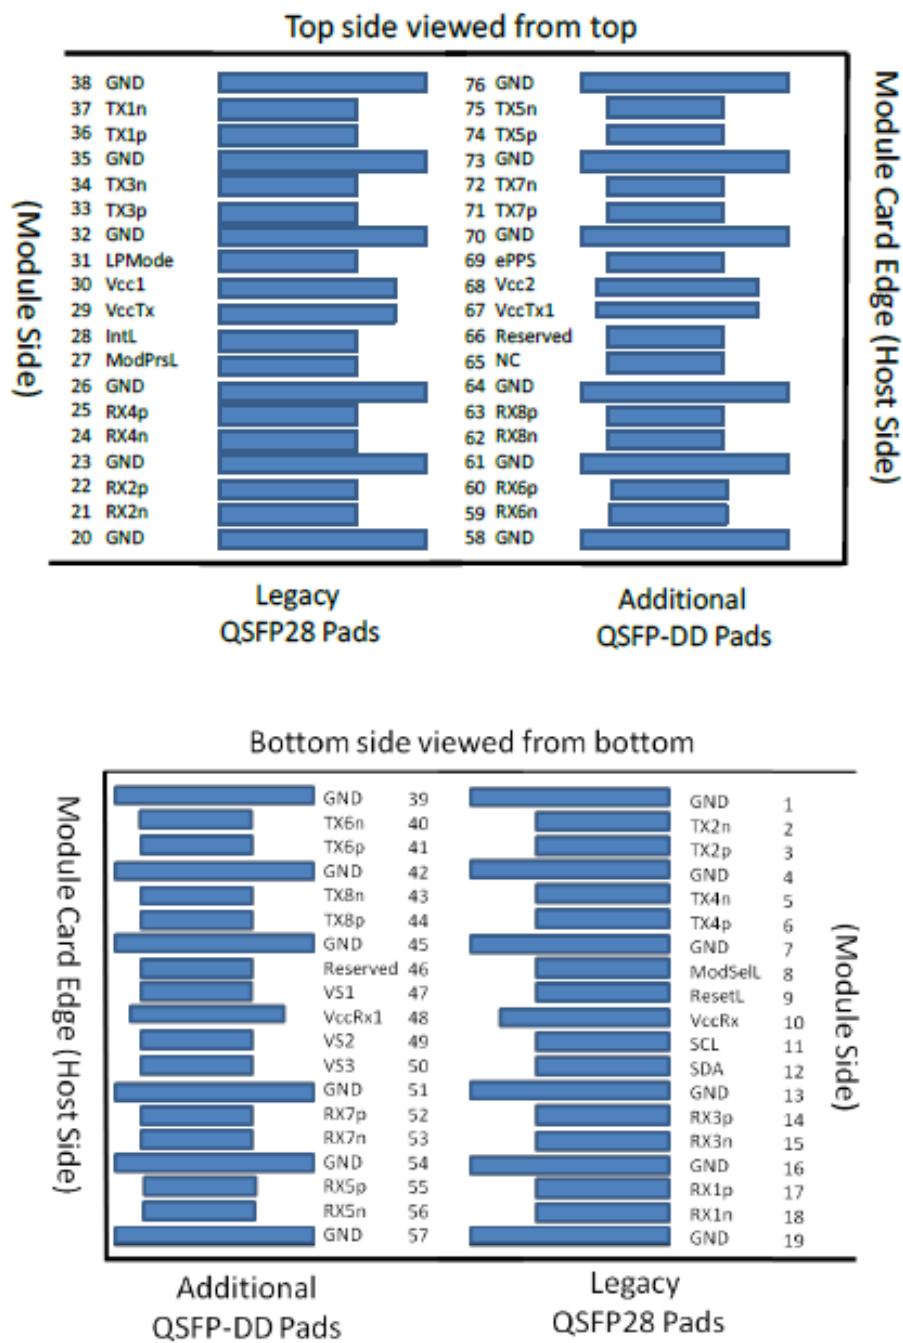


Figure 3: QSFP-DD Module Pad Layout



Revision History

Revision number	Date	Description
0.1	05/16/2017	▪ Preliminary
0.2	05/17/2017	▪ Compliant with MSA rev2.0
0.3	06/06/2017	▪ Removed Read/Write functionality parag
0.4		▪ Removed Device addressing and operation parag
0.5	08/23/2018	▪ Updated parag 2.2, 2.5.1, 2.5.3 and parag 3
0.52	11/23/2021	▪ Format Update



North America

48521 Warm Springs Blvd. Suite 310
Fremont, CA 94539
USA
+1 510 573 6388

Worldwide

Houmal Technology Park
Askarieh Main Road
Houmal, Lebanon
+961 81 794 455

Asia

14F-5/ Rm.5, 14F., No 295
Sec.2, Guangfu Rd. East Dist.,
Hsinchu City 300, Taiwan (R.O.C)
+886 3 5744 591