


Nexus Hardware QSFP

Technical Product Sheet


Nexus HW is the basic hardware package which provides 800G SI paths between host and module, with diagnostic probing interface for low-speed signals.

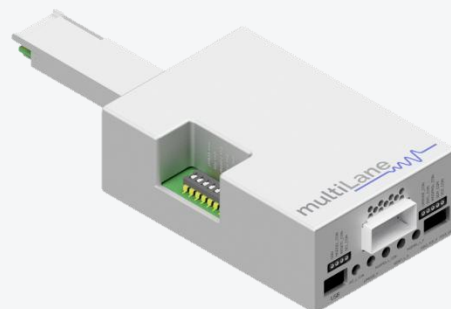

Nexus Hardware QSFP

The DIP switch enables selecting the connection between the plug side and the connector side.

- Pin headers serve as:
- Probing interface for low-speed signals
 - Connecting to external driver in the case of external signal mode

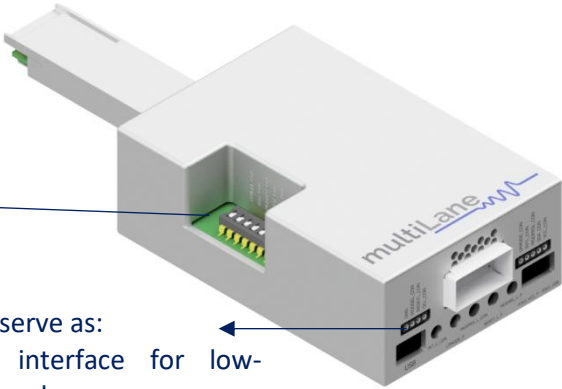

Front Shell Overview of Nexus QSFP:

The front of the Nexus QSFP hardware has a port for module insertion and a probing interface for low-speed signal access. Additionally, the other openings are reserved for the Nexus PRO version, which includes a USB port, LED indicators, and a switch.





Dip switch of Nexus QSFP:

The DIP switch on the interface can be turned ON or OFF based on their position:

ON Position: Move the switch towards the outer side (away from the numbers on the switch).

OFF Position: Move the switch towards the inner side (closer to the numbers on the switch).

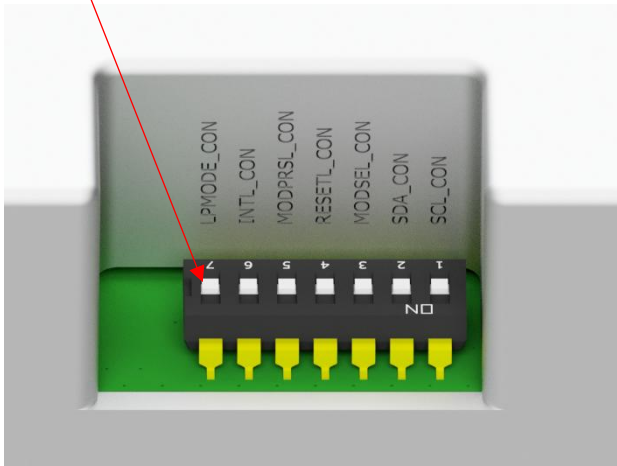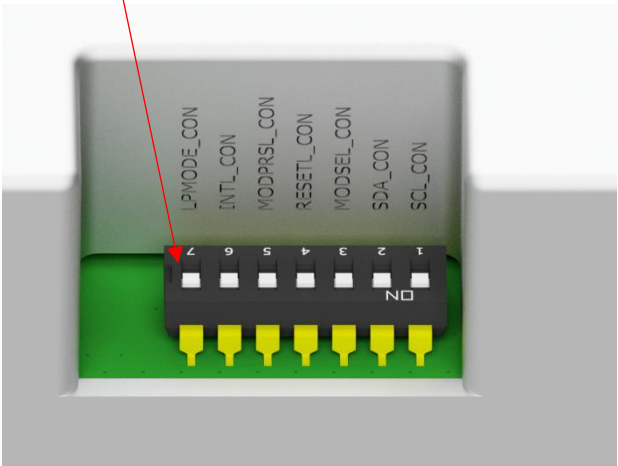


Nexus Adapter has the following Features:

- SI traces and connector support 112G rates
- Support up to 30W modules
- Probing interface for Vcc and GND pins – only used for probing and cannot be used to provide power
- Probing interface for low-speed signals
- Monitor and Control I2C externally
- Available in all SFF/CMIS form factors

When using Nexus Hardware (ML4066-NX-HW-QSFP), ensure that all DIP switches are set to ON to establish a connection between the plug side and the connector side, enabling control and communication between the host and the module.

QSFP		
Low-speed signals	Dip switch ON	Dip switch OFF
	Plug connected to Connector	Plug disconnected to Connector
SCL	I2C will be working if also SDA (Switch #2), and MODSEL (Switch #3, also must be in logic low from the host)—need to be ON.	Signal cannot be reached from the host INTERFACE to the module – no impact over the probing interface – no I2C working
SDA	I2C will be working if also SCL (Switch #1), and MODSEL (Switch #3, also must be in logic low from the host)—need to be ON	
MODSELL	Signal can be controlled from the host INTERFACE and tested over the probing interface	
INTL	Signal can be read over the host INTERFACE and tested over the probing interface	Signal cannot be reached from the host INTERFACE to the module – no impact over the probing interface
LPMode	Signal can be controlled from the host INTERFACE and tested over the probing interface	
MODPRSL	Signal can be read over the host INTERFACE and tested over the probing interface	
RESETL	Signal can be controlled from the host INTERFACE and tested over the probing interface	

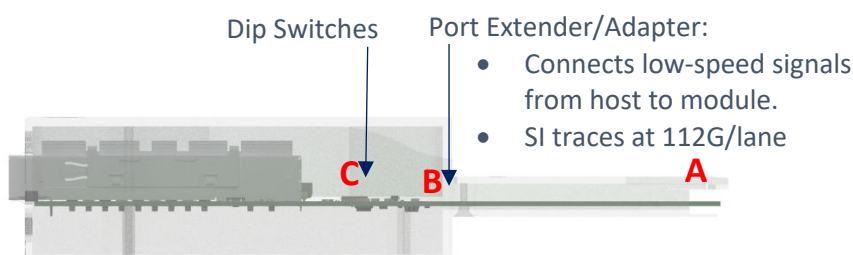


A: Signals from host side at NX-HW plug


B: Signals to NX-HW connector inside Nexus, going to the dip switches

C: If the switches are on the signals will be delivered to the module

Measured Insertion Loss data of 800G QSFP Adapter:

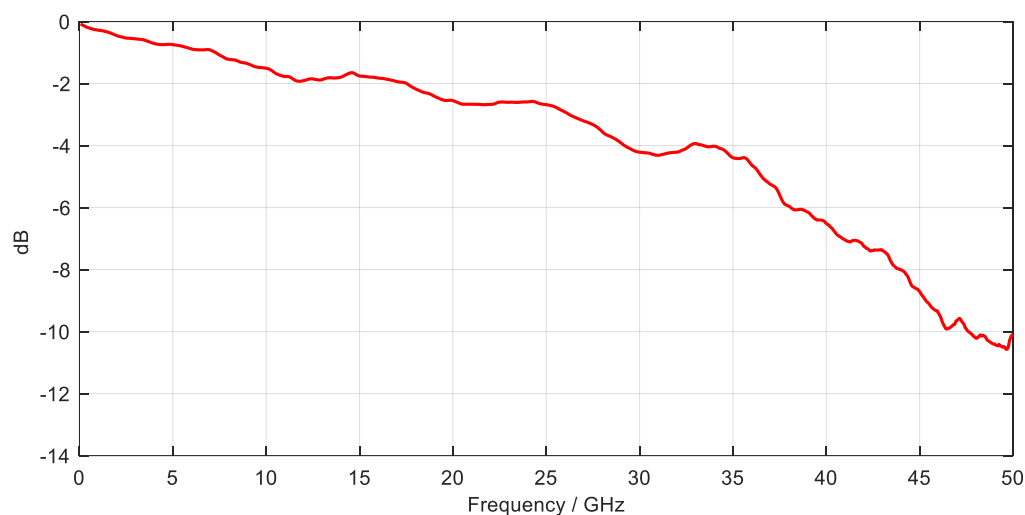

Host Intrinsic Cooling:

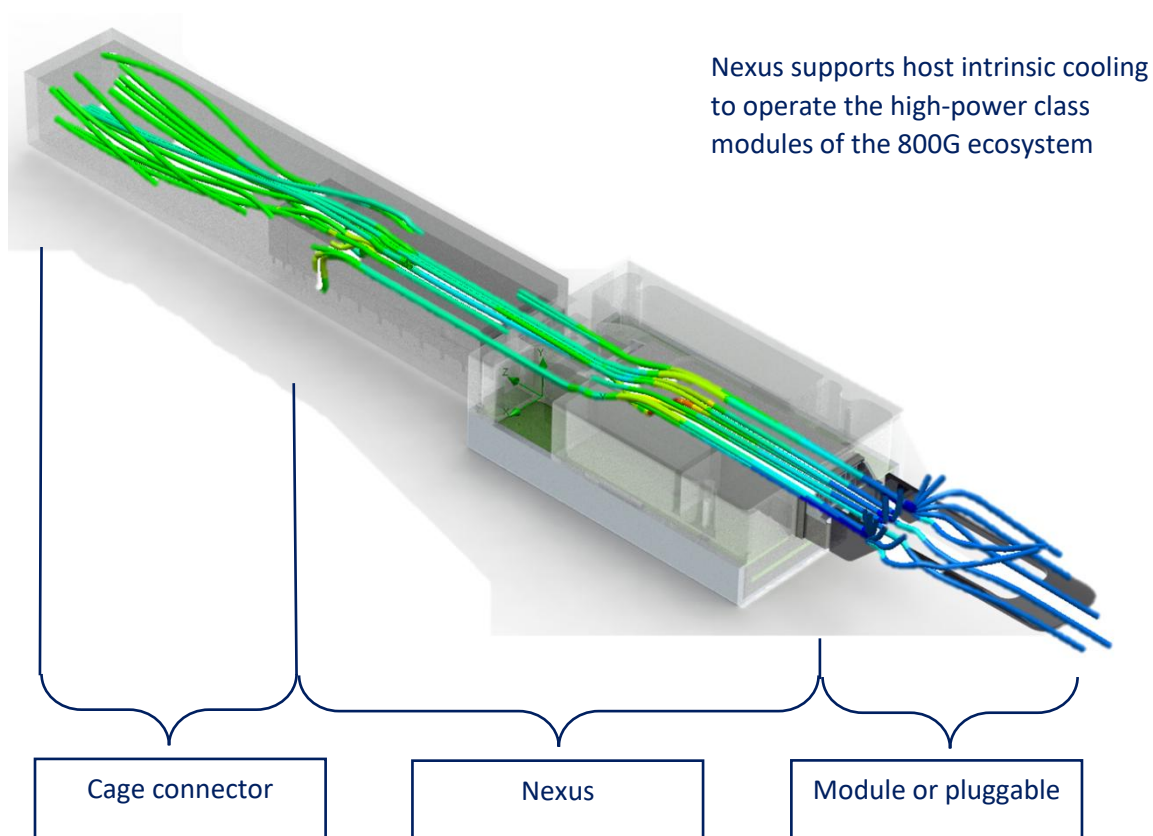

Ordering Options

Ordering Options	Description
ML4066-NX-HW-OSFP	Nexus HW is the basic hardware package only which provides 800G SI paths between host and module, with diagnostic probing interface for low-speed signals. Host intrinsic cooling OR Fan option
OR ML4066-NX-HW-OSFP-F	
ML4066-NX-Pro-OSFP	Nexus Pro includes the hardware package and the software license. It enables all Nexus GUI features including all CMIS updates. Host intrinsic cooling. OR Fan option
OR ML4066-NX-Pro-OSFP-F	
ML4066-NX-HW-QDD	Nexus HW is the basic hardware package only which provides 800G SI paths between host and module, with diagnostic probing interface for low-speed signals Host intrinsic cooling. OR Fan option
OR ML4066-NX-HW-QDD-F	
ML4066-NX-Pro-QDD	Nexus Pro includes the hardware package and the software license. It enables all Nexus GUI features including all CMIS updates. Host intrinsic cooling. OR Fan option
OR ML4066-NX-Pro-QDD-F	
ML4066-NX-HW-QSFP	Nexus HW is the basic hardware package only which provides 800G SI paths between host and module, with diagnostic probing interface for low-speed signals Host intrinsic cooling.
ML4066-NX-Pro-QSFP	Nexus Pro includes the hardware package and the software license. It enables all Nexus GUI features including all CMIS/SFF updates. Host intrinsic cooling.

North America

48521 Warm Springs Blvd.
Suite 310
Fremont, CA 94539, USA
+1 510 573 6388

Worldwide

Houmal Technology Park
Askarieh Main Road
Houmal, Lebanon
+961 81 794 455

Asia

7th Floor-2, No. 156
Sec. 2, Dongda Road, North District,
Hsinchu City 300, Taiwan (R.O.C.)
+886 3 5744 591

UAE

Building 4WA, Office 420
Dubai Airport Freezone Authority,
Dubai, UAE
+971 4 548 7 547